

Contoured Table Assembly Instructions

The item can be found on
www.CedarwoodFurniture.com

Call 877-595-8537 to order

Tools Required for Assembly

7/16" Socket or Adjustable Wrench
2# Squarehead Bit (included)
Hammer for tapping bolts and screws.

Hardware List

8- 2 1/2" Hex Bolts
8- Hex Nuts
24- 1/4 x 1" Fender Washers
8- 1/4 x 2 1/2" Lags

Parts List

1- Table Top
4- Table Legs

Hex Bolts



Screw




Fender Washer



Nut



Pre-drilled Hole

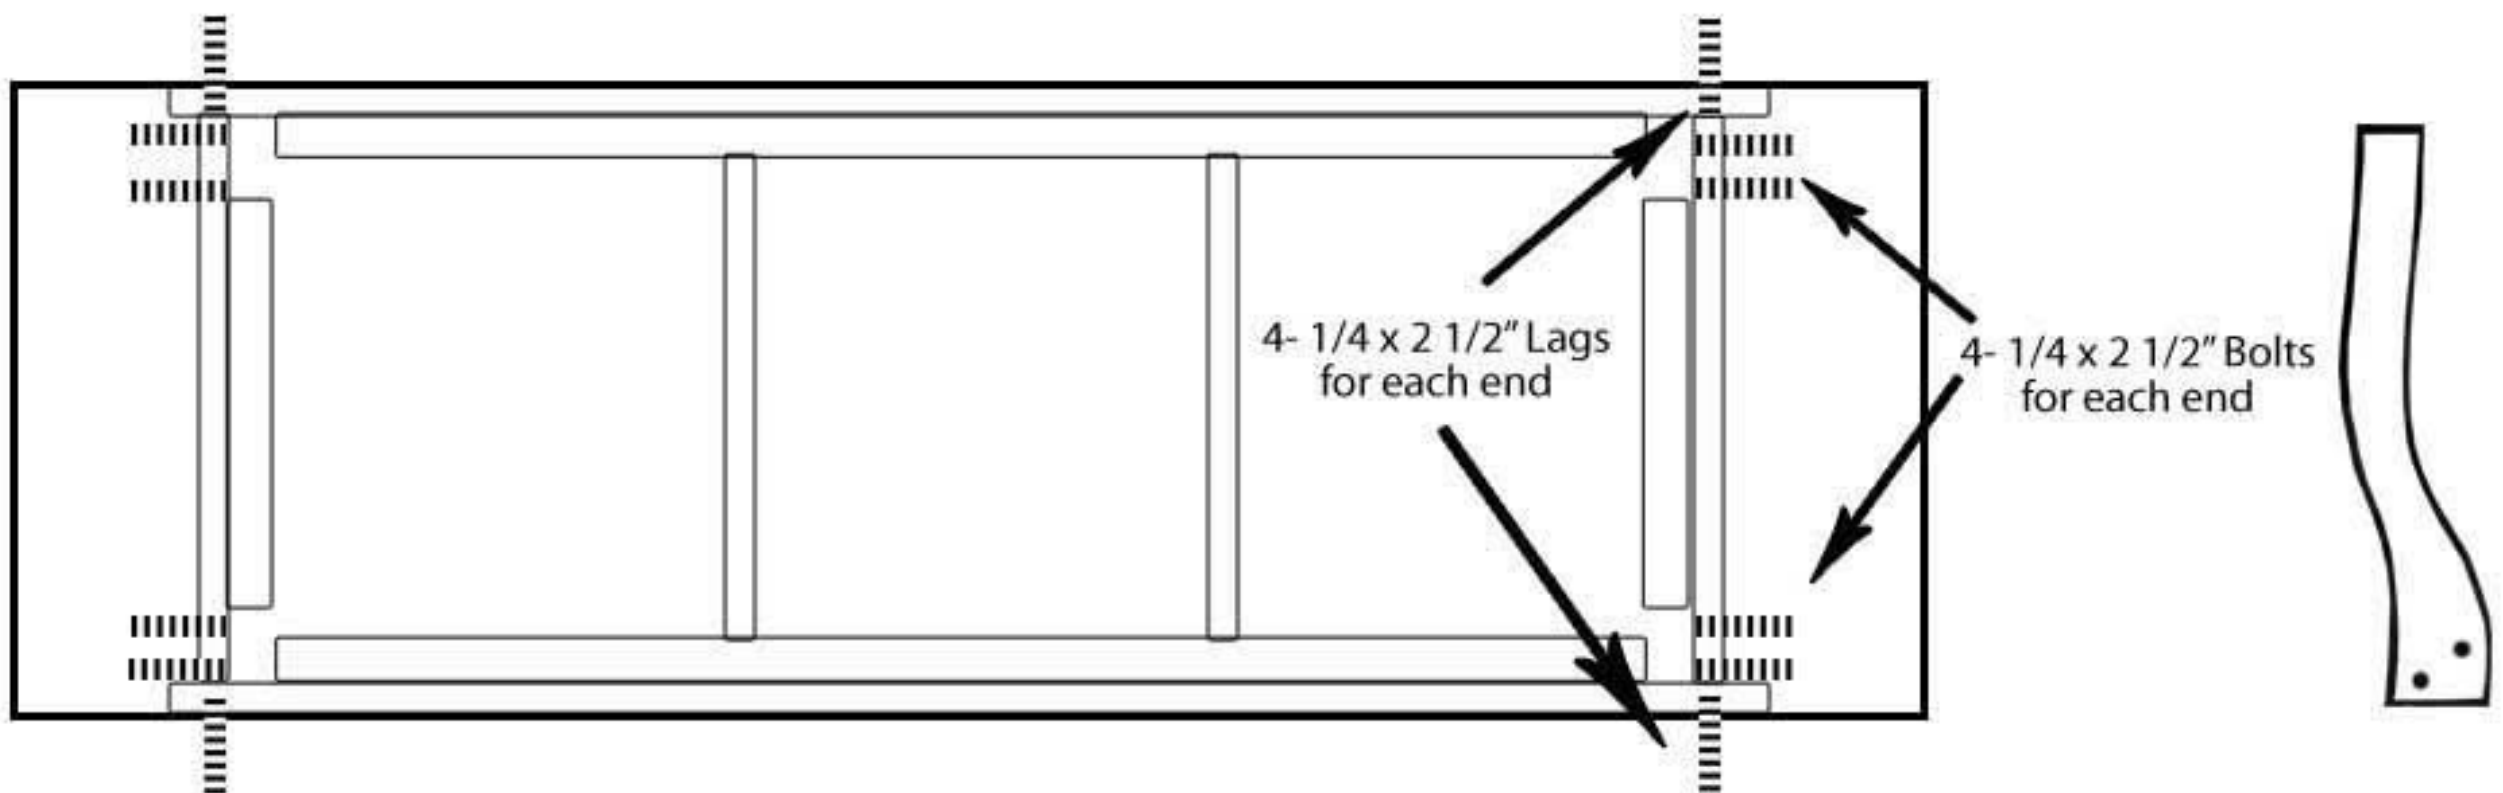

Step 1:

Lay the table top upside down on a clean flat surface. Place each leg on the outer side into the notched out cross member using the 2 1/2" bolt.

Step 2:

Next put the 2 1/2" Lags through the side rail piece into the leg.

Step 3:

Repeat with each leg.

Instructions For 32", 46", 58", 70", & 94" Red Cedar Contour Bench

ELY46CTT4B-2CVD, ELY58CTT4B-2CVD, ELY70CTT4B-2CVD, ELY94CTT4B-2CVD, ELY46CTT2B2BBCVD, ELY58CTT2B2BBCVD, ELY70CTT2B2BBCVD, ELY94CTT2B2BBCVD, ELY46CTT1B1BBCVD, ELY58CTT1B1BBCVD, ELY70CTT1B1BBCVD, ELY94CTT1B1BBCVD

The item can be found on
www.CedarwoodFurniture.com

Call 877-595-8537 to order

Tools Required for Assembly

7/16" Socket or Adjustable Wrench
2# Squarehead Bit (included)
Hammer for tapping bolts and screws.

Hardware List

8- 1/4 x 3" Hex Bolts
8- 1/4" Hex Nuts
16- 1/4 x 1" Fender Washers
8- 3" Screws

Hex Bolts



Screw



Fender Washer



Nut





Pre-drilled Hole



Parts List

1- Bench Top
4- Bench Legs

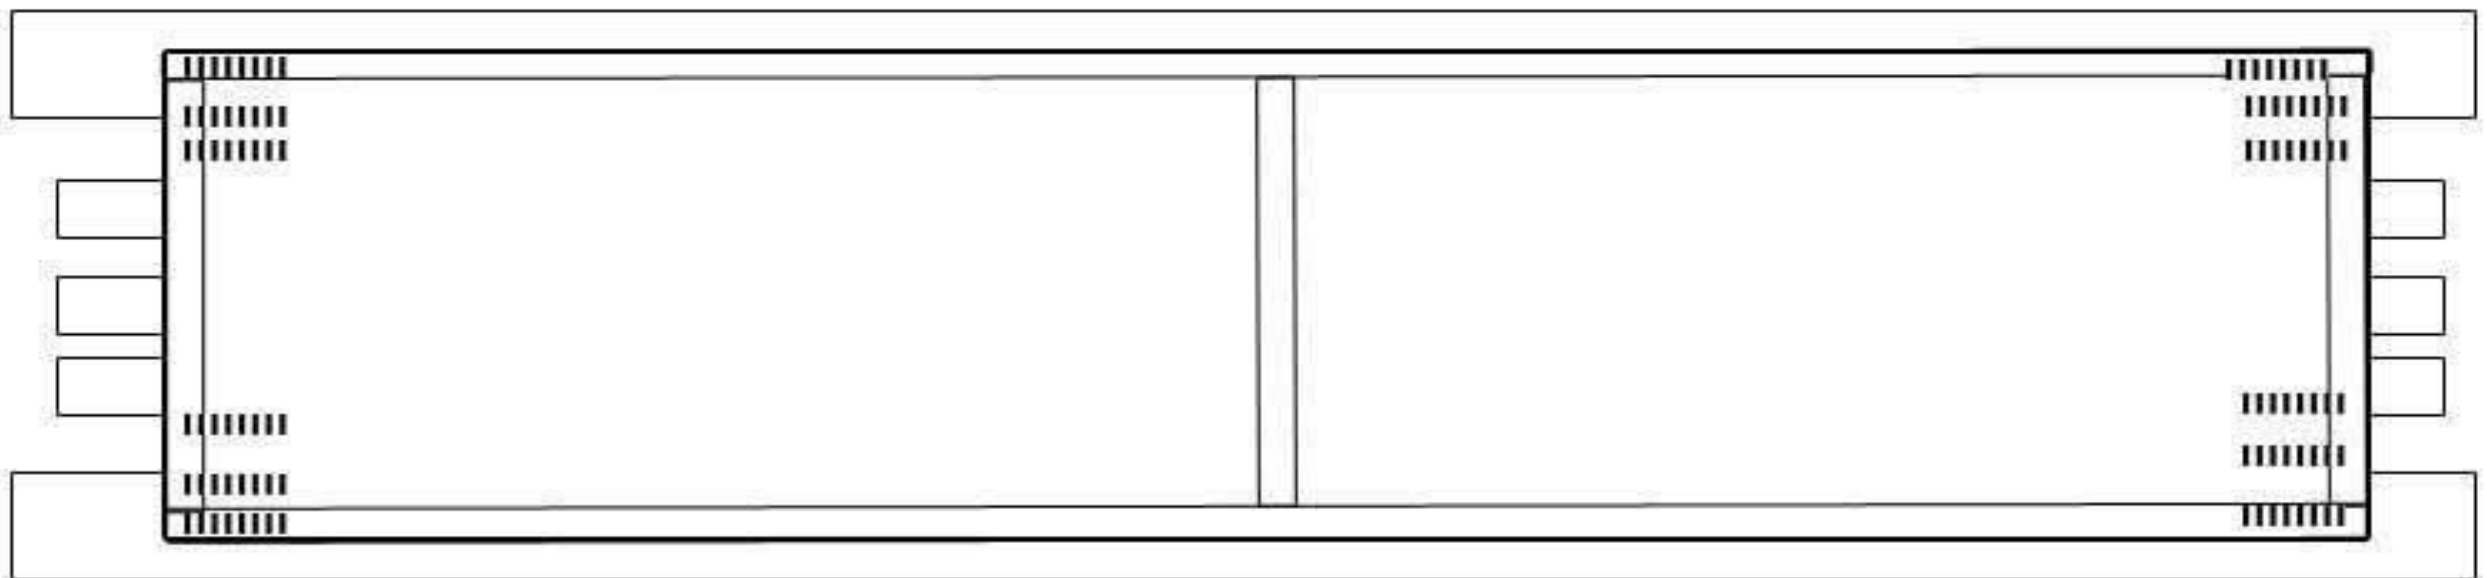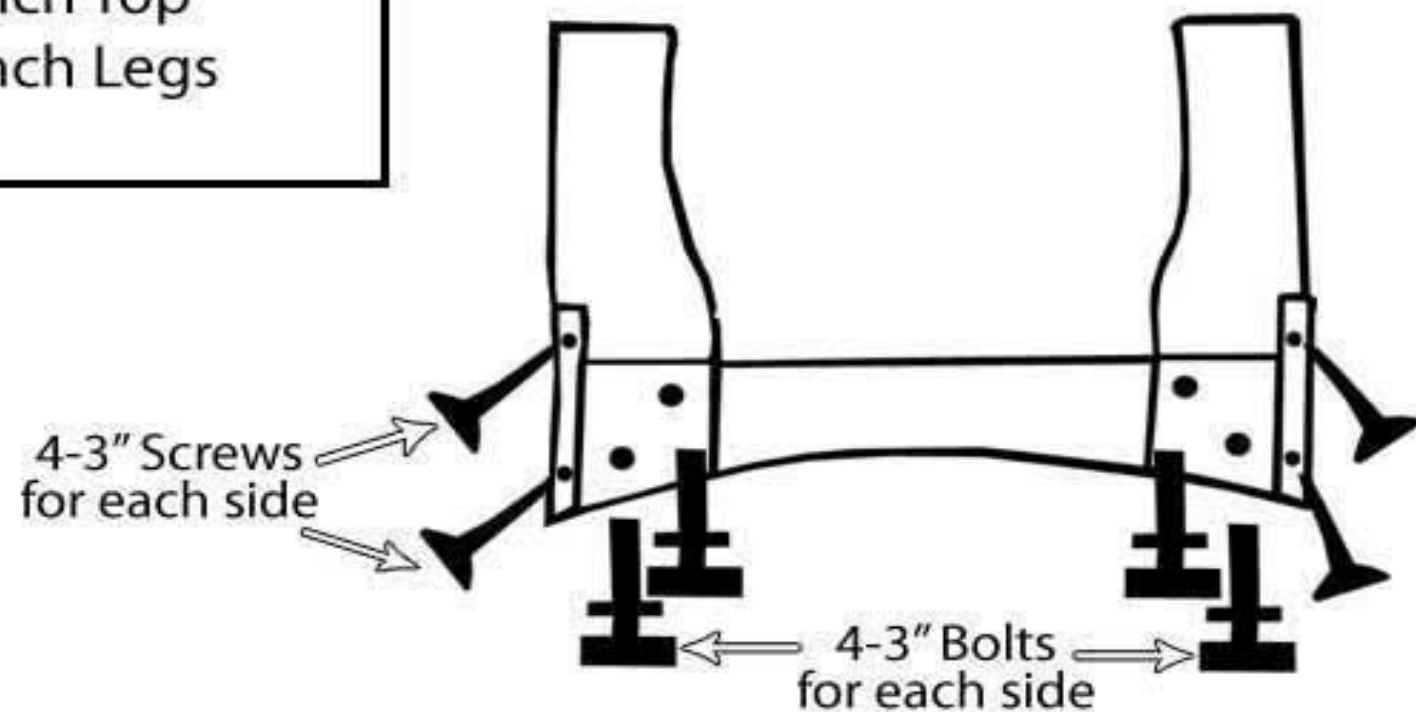

Step 1:

Lay the bench with the top upside down on a clean flat surface. Place each bench leg on the outside aligning with the predrilled holes. Tighten the bolts.

Step 2:

Next put the 3" screws in the small predrilled holes. It is easier to put the bolt part of the way into the predrilled hole and then tap the rest of the way with a hammer.

Step 3:

Repeat with each leg.