

Assembly Instructions

# **Crossleg Table Set**



Thank you for choosing **A&L Furniture Co.**We hope that this piece brings you many years of enjoyment!

For help with assembling your furniture, or if you have missing hardware, please email us at help@aandlfurniture.com or call us at 866-896-5747

# PARTS (A) Table Top (1) (B) Benches (2) (C) Table Legs (2) (D) Bench legs (4)

## **HARDWARE** (included)

2" Bolts (12)

(a)

<u>a</u>

9

2" Lag Screws (6) Allen Wrench (1)


 $\overline{\mathbb{C}}$ 


# **TOOLS NEEDED**

<sup>7</sup>/<sub>16</sub>" Wrench or Socket

### STEP 1


Lay table top upside down on a clean surface. Unfold table legs creating an X. Place legs on table top with one side outside 2x2 on table top & other side inside 2x2. Angle brace belongs toward center of top. Put a 2" bolt through the predrilled hole in each leg & turn into the threaded inserts in the 2x2 strip. Tighten with the Allen wrench. The bolts go in opposite sides, always put through the leg first.

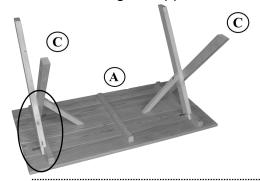


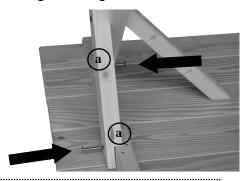

## STEP 2

Attach the leg braces to the table top. Place the braces in the center of the board & attach with 2" lag screws using a  $^{7}/_{16}$ " wrench or socket. Holes are not predrilled as lags are self drilling.

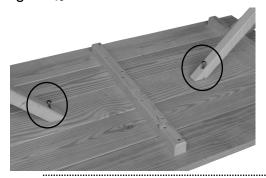

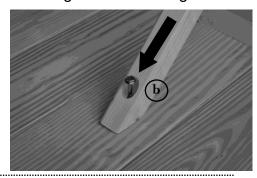

### STEP 3

Follow the same steps as above for assembling the benches. When attaching the braces place braces on opposite boards & not the crack between the boards.

