


# Assembly Instructions for the Treated Pine Patio Chairs

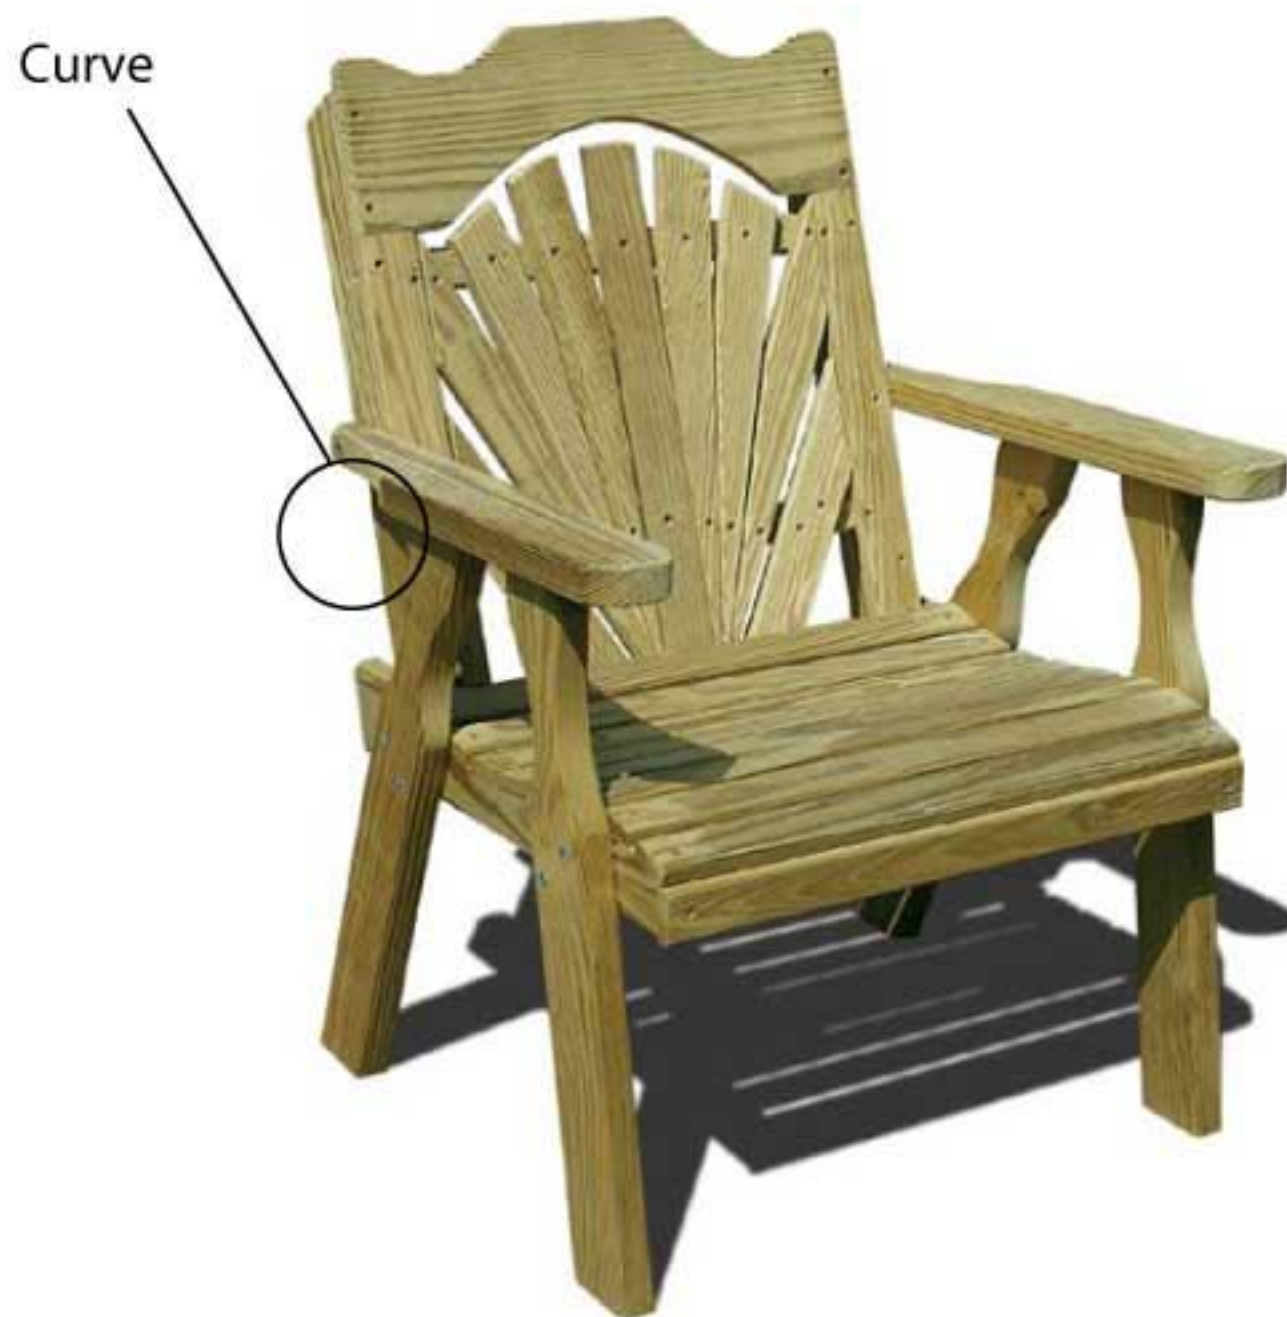

Treated Pine Fanback Chair Shown

## Tools Needed For Assembly

Hammer for light taping  
7/16" socket set

### Step 1

Attach the assembled back and seat together using the 3-1/4" carriage bolts and 1/4" flange nuts.

### Step 2

Attach the arm and leg assembly to the back and seat unit sides using the 3-1/4" carriage bolts and 1/4" flange nuts ( be sure the curve faces the outside on the arm when assembling-- Please view photo).

## Parts List

Seat (1)  
Back (1)  
Left Leg Assembly (1)  
Right Leg Assembly (1)

## Hardware

1/4" x 3-1/4" Carriage Bolts (14)  
1/4" Flange Nuts (14)

**Cracks may occur with these products. This is a normal and natural occurrence in wood, and will not affect the structural integrity of the wood and this product.**