
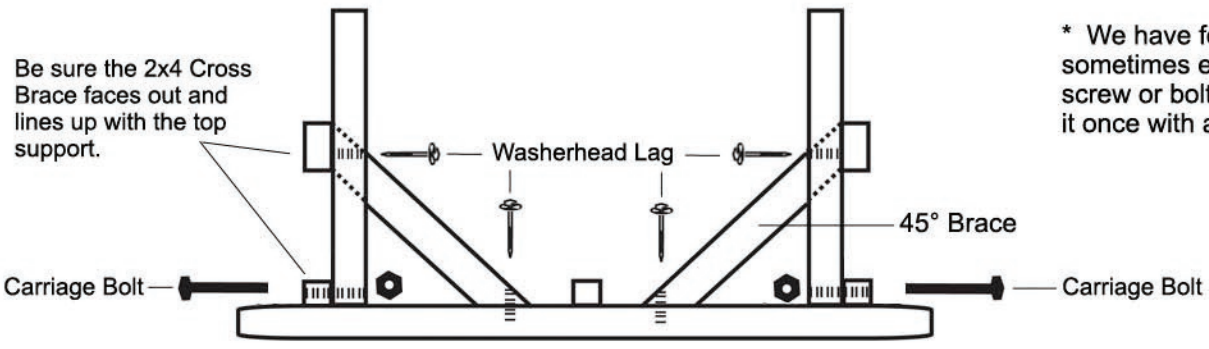
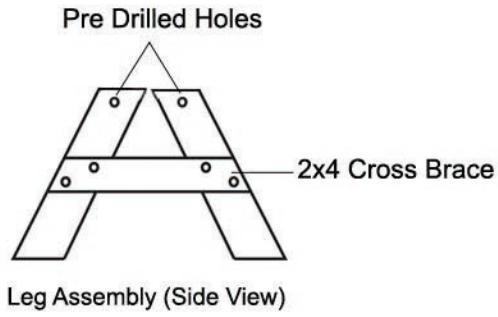


Treated Pine Backless Bench Assembly Instructions

| Parts |
|-------------------|
| 2- Leg Assemblies |
| 2- Braces |
| 2- Bench Top |

| Hardware |
|---------------------------------|
| 4- 1/4" x 3-1/4" Carriage Bolts |
| 4- 1/4" Nuts |
| 4- 1/4" x 2" Washerhead Lags |

| Required Tools |
|-------------------------------------|
| 7/16" Socket Or Adjustable Wrench |
| Hammer for tapping bolts and screws |

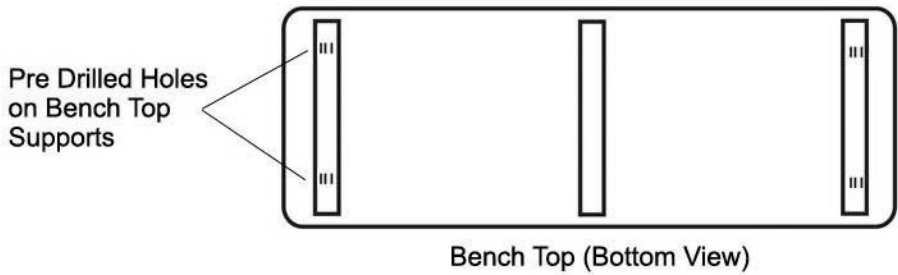

* We have found that it is sometimes easier to start each screw or bolt by lightly tapping it once with a hammer

Step 1. Lay the bench top upside down on a clean flat surface. (We recommend using the box that the package was shipped in) Place each leg assembly on the inner edge of the top support, via the pre drilled holes, and fasten with a 1/4" x 3-1/4" Carriage Bolt, 1/4" and Nut. Please be sure the leg assembly is square with the bench top and that the 2x4 Cross Brace faces out and lines up with the top support.

Step 2. Use the 1/4" x 2" Washerhead Lags to attach the 45° Braces.

Step 3. Turn the bench upright. Tighten the screws and/or bolts if necessary.