


# Treated Pine Swingbed

Items: FTSBED48CH, FTSBED48CO, FTSBED48CR, FTSBED48CU, FTSBED48FB, FTSBED48HB, FTSBED48HH, FTSBED48RB, FTSBED48STB, FTSBED60CH, FTSBED60CO, FTSBED60CR, FTSBED60CU, FTSBED60FB, FTSBED60HB, FTSBED60HH, FTSBED60RB, FTSBED60STB

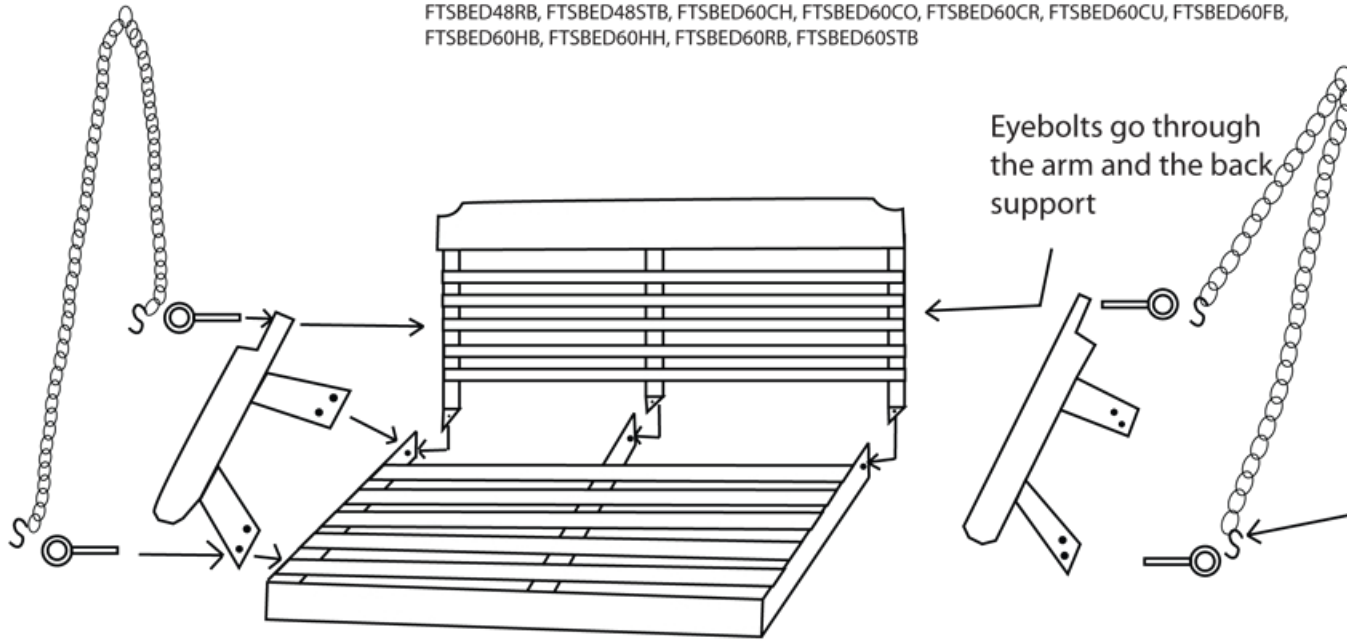

## Assembly Instructions

1. Fasten back to seat using a hammer to tap 1/4" carriage bolts in.
2. Fasten arms to seat and back.

Note: One of the holes in the front arm post is larger for the eyebolt.

Eyebolts go through the arm and the seat support.

## Tools

Hammer  
7/16 wrench  
9/16 wrench

## Hardware

- 12- 1/4x31/4" carriage bolts
- 12- flange nuts
- 4- 3/8" eye bolts ( 5" long)
- 4- 3/8" lock nuts
- 8- 3/8" flat washers
- 4- lengths of chain ( 7' long)  
(all 4 chains go all the way to the ceiling)
- 4- Connecting links (used to hook chains to eye bolts)

